

AOC

CB351

INSTALLATION GUIDE

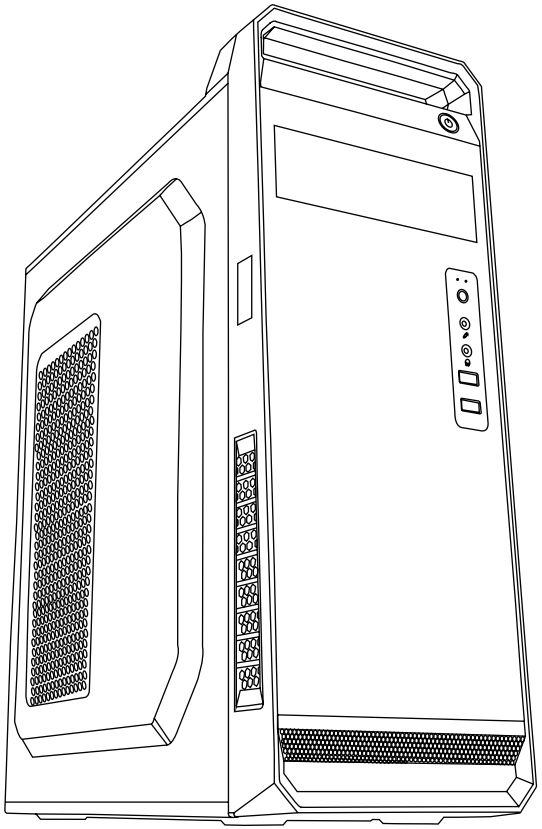


0

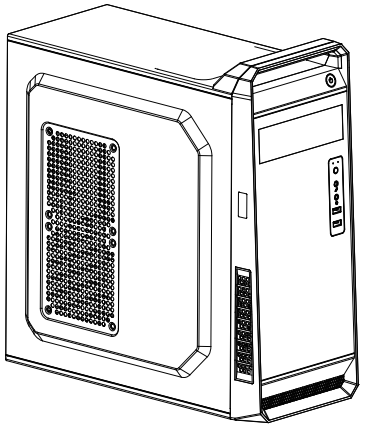


A: Remove the side panels and front panel.
B: Install the power supply (PSU).
C: Install the motherboard (MB).
D: Install the fans.
E: Install the hard-disk drive (HDD).
F: Install the solid-state drive (SSD).
G: Install the graphics card (VGA).

A

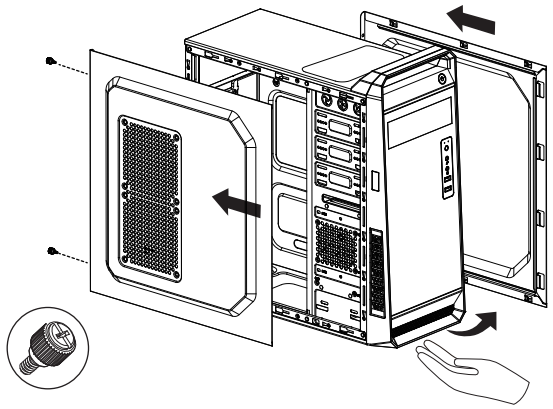

- Please remove the screws before removing the side panels.
- Please remove the side panels before removing the front panel.


C

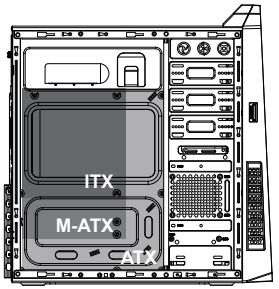




- Screw the iron screws, use the provided standoffs and screws to secure the motherboard

B

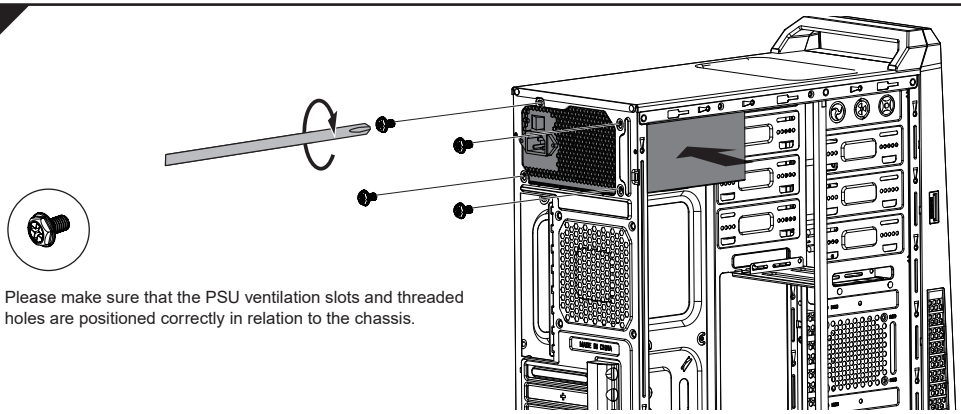

- Please make sure that the PSU ventilation slots and threaded holes are positioned correctly in relation to the chassis.

D

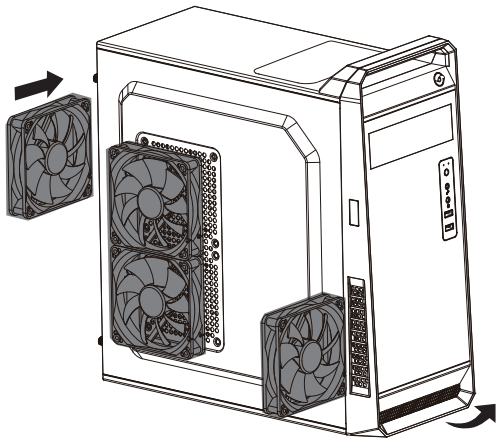



- Supported fans (maximum)

  Front: 1x 120 mm

  Back: 1x 80/120 mm

  Left Side: 2x 120 mm


  For superior performance, the chassis allows the use of a CPU cooler (135mm maximum Height)

E



- Insert the 3.5” HDD and fasten with screws as shown.

  Support 3.5” HDD x4

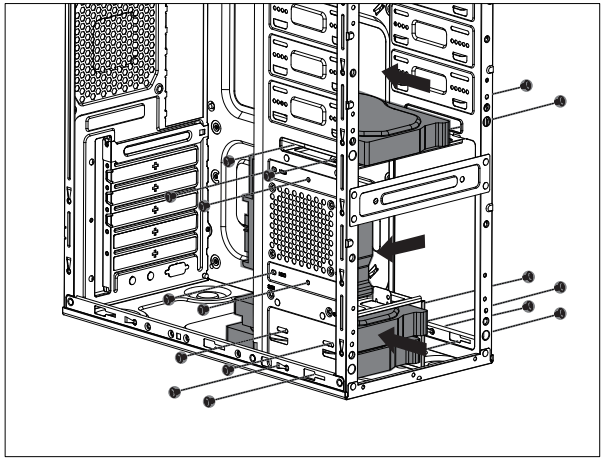


F




- Insert the 2.5” SSD and fasten with screws as shown.

  Support 2.5” SSD x2

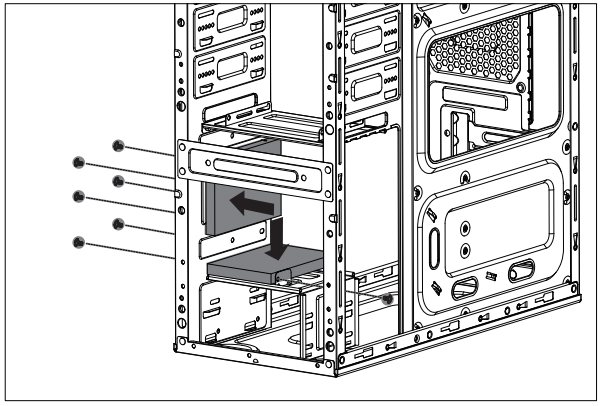


G

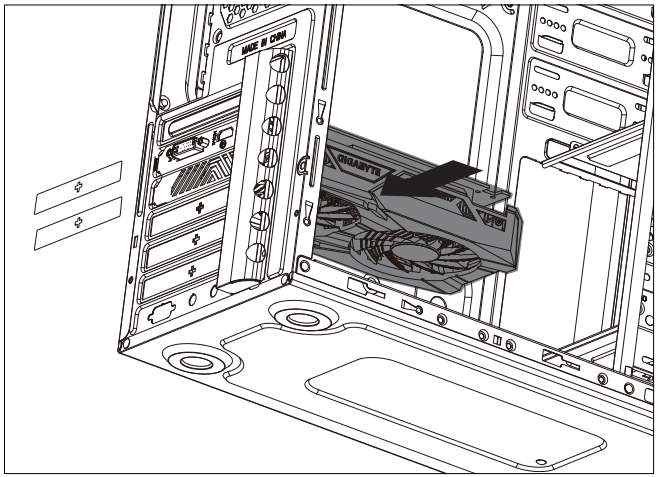




- Remove the PCI slot protection cover. Install the graphics card and secure it with a screw.

I/O PANEL

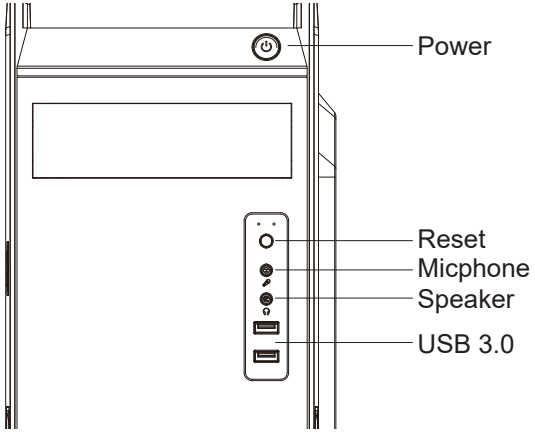

PIN diagram for I/O panel cable

USB 3.0 CONNECTOR

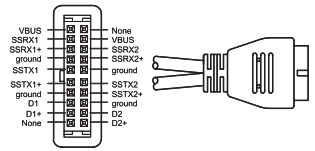

HD AUDIO CONNECTOR

